



Studor MAXI-VENT

Note:
There shall be a minimum of one VTR per building system, or one per each sewer stub-out. All other Stacks to terminate to Studor MAXI-VENTS.

Floor 10


Floors 5 Through 9 Typical

Floor 4

Floor 3

Floor 2

Floor 1

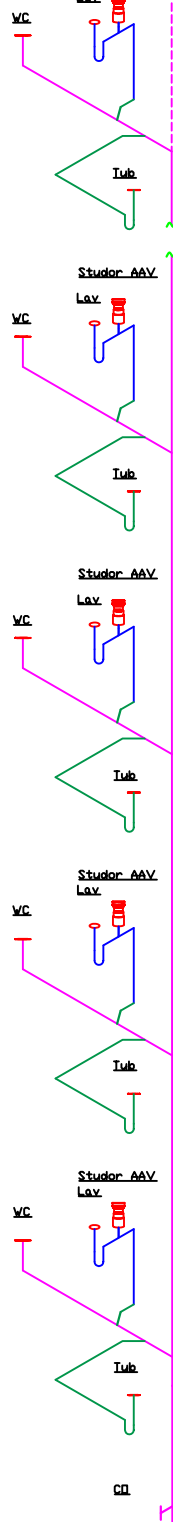

High Rise Utilizing Studor Air Admittance Valves and P.A.P.A.s (Positive Air Pressure Attenuators)

P.A.P.A.s located on floor one and five.